



USER'S MANUAL

English Version
Chinese Version

11Mbps Wireless LAN Access Point

GW-AP11H

PLANEX COMMUNICATIONS INC.

Trademarks

Copyright ©2003 PLANEX COMMUNICATIONS INC.

Contents subject to change without prior notice.

Pci is a registered trademark of PLANEX COMMUNICATIONS INC.

All other trademarks belong to their respective proprietors.

Copyright Statement

No part of this publication may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from PLANEX COMMUNICATIONS INC.

USER'S MANUAL

11Mbps Wireless LAN Access Point

GW-AP11H

Chapter 1 Introduction	1
Chapter 2 The GW-AP11H Features	3
LAN Features	3
Wireless Features	3
Configuration & Management	3
Security	3
Chapter 3 Package Contents	5
Chapter 4 Hardware Installation	7
Rear Panel	7
LED Indications	8
Hardware Installation	9
Connecting the GW-AP11H to your Network	10
Chapter 5 GW-AP11H/EN11H Utility Installation	11
Install TCP/IP Protocol	11
Install the GW-AP11H Utility	14
Chapter 6 Hardware Installation	18
Chapter 7 Configuring the Access Point	23
The Info Tab	23
The Assoc Tab	23
The Wireless Tab	24
The Advanced Tab	25
The Security Tab	26

The IP Addr Tab	28
The Admin Tab	29
The Help Tab	30
Chapter 8 Firmware Upgrade Procedure	31
Appendix A FAQ & Troubleshooting	33
Appendix B Glossary	37
Wireless Channel	37
DHCP Server	37
ESS-ID	37
LAN (Local Area Network)	38
MAC Address (Media Access Control Address)	38
TCP/IP (Transmission Control Protocol/Internet Protocol)	38
WEP (Encryption)	38
Firmware	38
Protocol	39
Roaming Function	39
Appendix C Specifications	40

About this manual

This user's manual describes how to install and operate the GW-AP11H (AP). Please read this manual before you install the product.

This manual includes the following topics:

- Product description, features and specifications
- Hardware installation procedures
- Software installation procedures
- Trouble shooting procedures

Congratulations on your purchase of this 11Mbps GW-AP11H (AP). This product is designed specifically for your 11Mbps wireless LAN environment needs. It is easy to configure and operate even for non-technical users. Instructions for installing and configuring this product are included in this manual. Before you install and use this product, please read the manual carefully so you may take full advantage of its functions.

■ LAN Features

- **DHCP Client** - Enable the AP to act as a DHCP client to receive IP address from DHCP Server in the wired Ethernet LAN.
- **Built-in 10BaseT LAN Port** - It's designed to bridge between wired and wireless LAN.

■ Wireless Features

- **Standard Compliant** - The AP complies with IEEE802.11b standard, and it is interoperable with IEEE802.11b-Compliant Equipment.
- **High Speed Wireless Connection** - Using Diversity Dipole Antenna to secure reliable 11Mbps wireless data rate connection.
- **Data Rate Auto Fall-Back** - Provides 11, 5.5, 2 and 1Mbps wireless data rate shifting dynamically to guarantee availability and reliability of wireless connections.
- **Roaming** - Provides seamless roaming within 802.11b wireless LAN infrastructure.
- **Long Distance Reach** - Support 80M indoor and 300M outdoors long operating distance under normal environment condition.

■ Configuration & Management

- **Easy to Setup** - With windows-based Wireless Navigator Utility, user can easily setup the IP address of this AP and upgrade the firmware.
- **Easy to manage** - User can use any WEB browser from anywhere on the wired or wireless LAN to configure the AP easily.

■ Security

- **Configuring Protection** - Provides password protection to prevent unauthorized users from changing the configuration.
- **Wireless LAN Security** - Provide 64-bit & 128-bit Wired Equivalent Privacy encryption to protect the wireless data transmissions.

Chapter 3


Package Contents

- One Wireless Access Point GW-AP11H
- One CD-ROM (GW-AP11H utility software & user's manual included)
- One RJ-45 straight LAN Cable (1m)
- One Power Adapter

If any of the above items are damaged or missing, please contact your dealer immediately.

Physical Details

■ Rear Panel

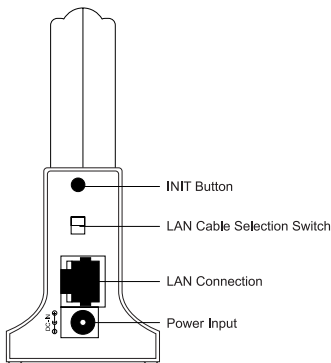

4-1

● INIT Button

"INIT" mean "Initiation". While pressing the button, the GW-AP11H will reboot and reset current settings to factory default settings. The left indicator "Wireless" on GW-AP11H will be off and then begin blinking. Then this initiation action will be completed when the indicator "Wireless" is always green instead of blinking.

● LAN Cable

● Selection Switch

X	Crossover: the RJ-45 port Tx and Rx lines are reversed. Use this setting when you have a straight cable connected. It is also the factory default setting.
	Straight: the RJ-45 port Tx and Rx lines are normal. Use this setting when you have a crossover cable connected.


● Power Input

Only use the power adapter supplied with the GW-AP11H.

● LAN Connection

Use standard Ethernet cable (RJ-45 connector) to connect your PC, hub/switch or broadband router/modem to this port.

■ LED Indications

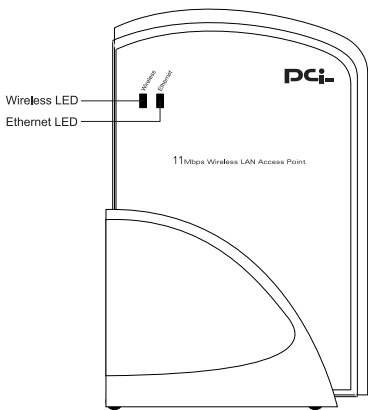


4-2

LED	Color	Status	Description
Ethernet	Green	ON	Link the Ethernet
		OFF	Not have link the Ethernet
Wireless	Green	ON	The GW-AP11H power on
		Blinking	Sending or Receiving data via wireless

■ Hardware Installation

Following illustration is an example showing how to install GW-AP11H with hub/switch.

Be sure to use the supplied power adapter.

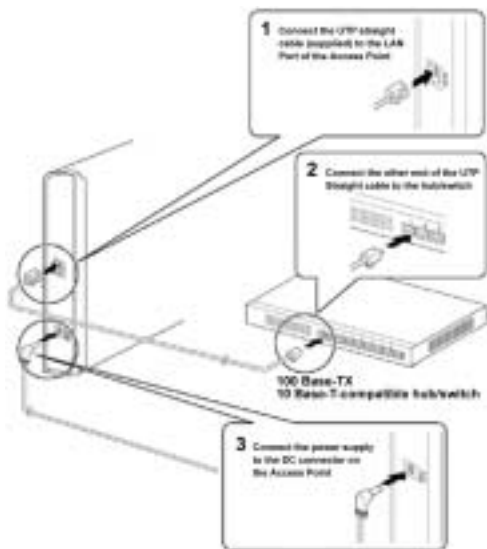


4-3

■ Connecting the GW-AP11H to your Network

For optimal performance, usually the center of your wireless network is the best place for your GW-AP11H, with line of sight to all of your mobile stations. Try to place it in a position where can best cover your wireless network and is away from any potential source of interference. And normally, the higher you place the GW-AP11H, the better the wireless signal coverage will be.

The following picture describes how to use the GW-AP11H when communicating between wireless LAN and wired LAN.

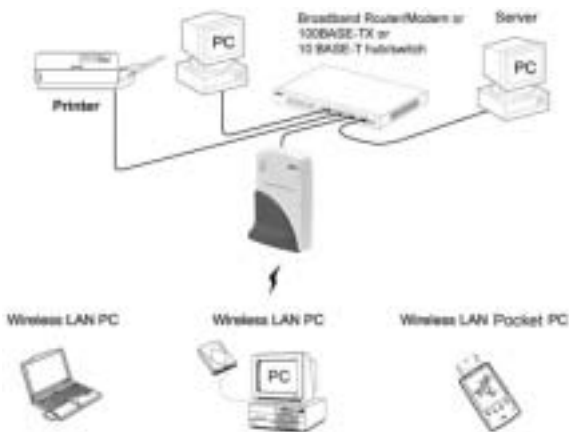

4-4

■ Install TCP/IP Protocol

TCP/IP Protocols are necessary for computers to communicate on LAN and Internet.

Note:

If your PC already has TCP/IP protocol installed, please skip this section. Please contact your administrator for details if you have problems of setting up this TCP/IP protocol in your PC.

Example : TCP/IP Setup in Windows 98SE

1. From the **Start** Menu, select **Settings** and bring up the **Control Panel**.



4. Highlight Protocol and click the Add button.




5. Select Microsoft from the list of "Manufacturers" and TCP/IP from the list of "Network Protocols" and click the OK button to finish the installation.



■ Install the GW-AP11H Utility

The GW-AP11H Utility is provided to allow user(s) easily to configure the AP through any Windows-based PC over wired or wireless LAN port. This section describes procedures for installing the GW-AP11H Utility to PC.

Step 1: Insert the installation CD-ROM into the CD-ROM drive. Run GW-AP11H\UTILITY\SETUP.EXE program on the CD-ROM. The following window will be shown automatically.

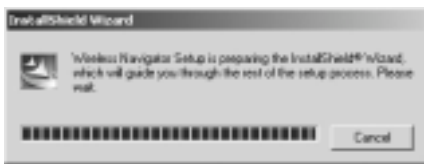

Step 2: After InstallShield Wizard preparation finished, the following window will be shown. Click the Next button to continue.



Step 3: Key in your User Name and Company Name, and click Next button to continue.




Step 4: The screen will show you the default destination chosen by the utility. If you want to install the Wireless Navigator in another location, click the Browse button and select an alternate destination. Click the Next button, when you are ready to continue. The setup program will then begin to install the programs into the destination folder.



Step 5: The screen will show you the Program Folder that the utility will use. You may type a new folder name to create a new program folder, or select one from the existing folder list, and click Next button to continue.



Step 6: The Wireless Navigator has been installed now. Please select Yes, I want to restart my computer now, also click the Finish button to complete installation.

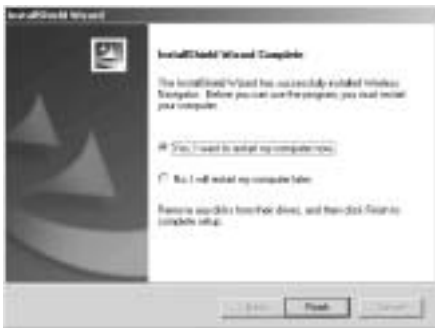

Note:


To remove GW-AP11H Utility, click the Start button, and select Programs, bRoad Lanner Wave, and Uninstall, and then follow the instruction on screen.

Follow the procedures below to startup GW-AP11H Utility and find the AP. Before you start the following procedures, please be sure to connect the Ethernet cable, connect the power cord, and then turn on the AP. All wireless clients shall be requested to set the their SSIDs same as the AP SSID in advance before starting the following procedures.

1. Refer to previous section " Install the GW-AP11H to your PC" in order to startup the configuration.
2. Click **Start** and select **Programs, bRoad Lanner Wave** and then **GW-AP11H/EN11H Utility** . Or, just double-click the **GW-AP11H/EN11H Utility** icon on your desktop screen.
3. The **GW-AP11H/EN11H Utility** starts up, and search via wired LAN or Wireless LAN depend.



- The utility will show the AP and other wireless devices found in the same network, where your PC is located.

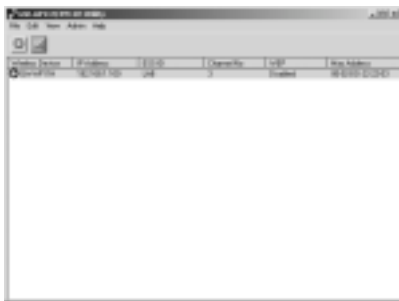**Note:**

If the AP is not shown in the list, please make sure all the cables are well connected.

- Double-click on the AP, then you will access into its built-in web server, and it will show as below. Please input User Name:**admin**,do not need the password click OK button. (Default User Name:**admin**,Password : do not needed the password).



Note:

If you cannot access into AP's built-in web server, please make sure if your PC now is in the same subnet with AP. Please us right-click of mouse to click on the AP listed in **GW-AP11H/EN11H Utility** or. "**Set IP address**" option will pop out, and then change IP address of AP to the same subnet as your PC.



6. Then following screen will be shown. Now you have entered the built-in web server of this AP, and you can start to configuration procedures.



■ The Info Tab



INFORMATION: displays the basic information of this AP.

Firmware revision: displays current firmware version of this AP.

MAC address of AP: displays the unique serial number burned into this AP that identifies itself from other Ethernet devices

Current IP address: displays current IP address of this AP.

■ The Assoc Tab



ASSOCIATIONS: displays all the wireless clients, which are currently associated with this AP.

Mac address: displays the MAC address of associated wireless client.

Time idle: displays the idle time of each associated wireless client

■ The Wireless Tab



Wireless: displays the basic wireless configuration of this AP.

Access point name: displays current device name of the AP. You also can change the name as your will.

SSID: Used to identify the wireless LAN. To communicate with this AP, all wireless clients **MUST** use the same SSID as AP's. The SSID is case sensitive. Default SSID is "**bRoadLanner**".

Channel: Selects the appropriate radio channel from the list provided. The permissible number of channels depends on the Regulatory Domain. (The factory default channel setting also depends on the Regulatory Domain).

Basic rates (Mbits/s): The transfer rate that is used when a client is to associate with the AP.

Supported rates (Mbits/s): The transfer rate that a client is capable of receiving.


Transmission Rate: Selects the rate adapting mechanism. The default setting is "Automatic", which allows the AP to automatically adjust its transfer speed for optimal performance and longest operating range.

Preamble type: Uses long, short or both preambles in physical layer. Default value is "Long".

Note:

You may need to re-load the page to see any new settings.

■ The Advanced Tab

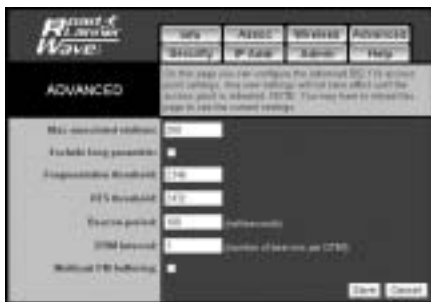

ADVANCED: displays the advanced wireless configuration of this AP.

Max associated stations: displays the maximum number of associated clients. In order to get a better performance, it is suggested to set "8" as the maximum number of associated clients to get a balanced performance

Exclude long preamble: Enables to exclude packets with long preambles in physical layer.

Fragmentation threshold: The threshold which a data packet will be fragmented.

RTS threshold: The threshold which a RTS packet will be sent before a data packet is sent.

Beacon period: The period in millisecond a beacon will be sent.

DTIM interval: Number of beacon intervals between successive DTIM (Delivery Traffic Identification Maps).

Multicast PM buffering: Enables the data buffering for Power Management.

Note:

You may need to re-load the page to see any new settings.

■ **The Security Tab**

The screenshot shows the 'Security' configuration page for a GW-AP11H device. At the top, there are navigation tabs: 'Info', 'Setup', 'Wireless', 'Advanced', 'Security', 'WEP Setup', 'Access', and 'Help'. The 'Security' tab is selected. Below the tabs, there is a header 'SECURITY' and a brief introduction: 'In this page you control the 802.11b security and encryption options, and also enable MAC address filtering. And you settings of the key (WEP) and the access point is returned. NOTE: You may have to refresh this page to see the current settings.'

The main configuration area is divided into several sections:

- Hide SSID in the beacon:** A checkbox that is currently checked.
- WEP configuration:** A section with a title and a note: 'For 64 bit keys you must enter 10 hex digits into the key fields. For 128 bit keys you must enter 26 hex digits. If you leave the key field blank, this means a key of all zeros.'
 - WEP enabled:** A checked checkbox.
 - WEP key 1:** A text input field containing '1234567890'.
 - WEP key 2:** A text input field containing '1234567890'.
 - WEP key 3:** A text input field containing '1234567890'.
 - WEP key 4:** A text input field containing '1234567890'.
 - WEP key to use:** A dropdown menu with '1' selected.
 - Strong unencrypted data:** A checked checkbox.
 - Authentication:** Radio buttons for 'Open', 'Shared key', and 'Both'. 'Open' is selected.
- MAC address filtering:** A section with a title and a note: 'Public filtering'.
 - Public filtering:** A checked checkbox.
 - Add an address:** A text input field with a 'Add address' button next to it.
 - Addresses to allow:** A large text area for listing MAC addresses, with a 'Remove selected' button at the bottom right.

SECURITY: displays the 802.11b security and encryption options on this AP.

Hide SSID in Beacon: The option to hide the SSID in beacon, so that this AP will not be found by a passive scan from GW-AP11H/EN11H Utility.

Stations cannot use "unspecified" SSID: Enables the AP to NOT associate with any station whose SSID is set as "Any".

WEP configuration: Display the Wired Equivalent Privacy security configurations

WEP enabled: Enables the Wired Equivalent Privacy security function.

WEP key length: Selects 64-bit or 128-bit WEP encryption. Be sure that the setting in the AP shall be the same as in wireless clients, otherwise the communication will not work.

WEP key: For 64-bit WEP encryption, a key of 10 hexadecimal characters in length must be filled in. For 128-bit WEP encryption, a key of 26 hexadecimal characters in length must be filled in.. Be sure that the key in the AP shall be the same as in wireless clients, otherwise the communication will not work.

WEP key to use: Selects one of four key sets to be used for encryption. To connect to a Wi-Fi compliant wireless device, key #1 must be selected.

Deny unencrypted data: Checks this box, then any unencrypted data frames will be denied.

Authentication: Selects the mechanism of shared key, open system or both authentication algorithm

MAC address filtering: Displays the MAC address filtering mechanism.

Enable filtering: Enables to filter the MAC address of every wireless device, which intends to associate with this AP.

Add an address: Adds an MAC address of a wireless device to the filter list.

Addresses to allow: Adds MAC addresses of those wireless devices, which are allowed to associated with the AP.

Note:

How to get the MAC address:

For example, If your PC is running in Windows environment, please enter the DOS Box, and key in the command " ipconfig /all " to get the Physical Address (MAC address) of your PC. For users who use other operation systems, please consult the system administrator for details.

Note:

You may need to re-load the page to see any new settings.

■ The IP Addr Tab



IP ADDR: displays the status of current IP setting .

IP Address Mode: Select "Static" or "DHCP" mode. For "Static" mode, the IP address settings are given by user. For "DHCP" mode, these settings will be overridden by a DHCP server on your network. The default setting is "Static"

IP Address: The static IP address you want to assign to the AP. The default value is "192.168.1.100".

IP Subnet: The subnet mask you want to assign for the AP. The default value is "255.255.255.0".


IP Gateway: The gateway you want to assign for the AP. The default value is "192.168.1.1".

Allow upgrade uploads: Uncheck the box, and then it is allowed to upgrade firmware.

Note:

You may need to re-load the page to see any new settings.

■ The Admin Tab

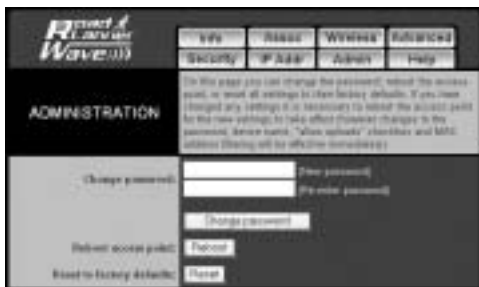

ADMINISTRATION: Allows to change the device's system configurations.

Change password: Default none password.

Reboot access point: When any setting was changed, the AP **MUST** be reboot so that the change can be confirmed.

Reset to factory defaults: This option will **ERASE** all the current settings, and return back to the factory defaults.

Note:

There could be several PCs over wired or wireless LAN installing with Wireless Navigator Utility, and managing the AP simultaneously. Hence, it is suggested to change the password.

Note:

You may need to re-load the page to see any new settings.

■ The Help Tab

HELP: Displays the explanations of each setting shown in above seven tabs. Please click those hyperlinks in left side, and then it will show you to the meaning of each setting.


Chapter 8 Firmware Upgrade Procedure

Click Start and select Programs, bRoad Lanner and then GW-AP11H/EN11H Utility, just double-click the GW-AP11H/EN11H Utility icon on your desktop screen.


The GW-AP11H/EN11H Utility starts up.



The computer starts searching for the Access Point and shows in the list. Choose the AP that you would like to upgrade the firmware, and use the right-click of the mouse to enter the "Upgrade FW" option.

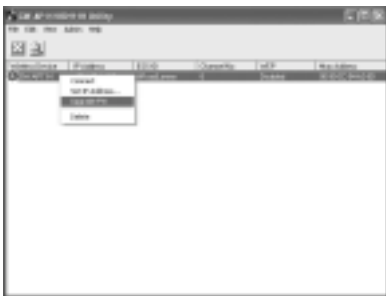


The download will begin. Key in the new firmware file name and location or click browsing to find the file in your computer.

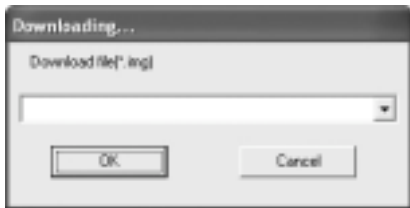

After entering the file information, click OK to continue.



The downloading begins.

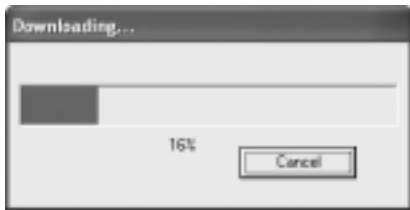

After download finished, the AP will reset automatically, and the left indicator "Wireless" on AP will be off and then begin flashing. When the indicator "Wireless" is always green instead of blinking, the firmware upgrade is completed and successfully.

This chapter provides solutions to problems usually encountered during the installation and operation of the Wireless Access Point. Please refer to the following descriptions to solve the problems. If you can't find an answer here, please contact your dealer for further advices.

Q: My PC can't locate the Wireless Access Point. How to check the problem?

A: Please follow the procedures below:

Check if your PC has installed TCP/IP protocol.

Check if the IP addresses of your PC and Wireless Access Point both are on the same IP network. If not, you may use Wireless Navigator to set up AP's IP address, or change your PC's IP address.

Check if your wireless LAN card is set to Infrastructure correctly.

Check if the SSID of your wireless card is the same as AP's.

Check if the WEP is enabled. If yes, please make sure that the wireless card in your PC and the Wireless Access Point both have the same setting for WEP, such as the key tables must match.

At last, please check if radio interference is causing a problem; see if connection is possible when close to the Wireless Access Point. Remember that the connection range can be as short as 100 feet in poor environment.

Q: The Wireless connection speed is very slow. How to improve the problem?

A: The wireless system will connect at the highest possible speed, depending on the distance and the environment condition. To obtain the highest possible connection speed, you have to try to adjust the Access Point location and orientation. If you find the interference is the problem, changing to another channel may show a marked improvement.

Q: Can I run an application from a remote computer over the wireless network?

A: This will depend on whether or not the application is designed to be used over a network. Consult the application's user guide to determine if it supports operation over a network.

Q: Can I play computer games with other members of the wireless network?

A: Yes, as long as the game supports multiple players over a LAN (local area network). Refer to the game's user guide for more information.

Q: What is the IEEE 802.11b standard?

A: The IEEE 802.11b Wireless LAN standards subcommittee, which is formulating a standard for the industry. The objective is to enable wireless LAN hardware from different manufacturers to communicate.

Q: What's Ad-hoc?

A: An Ad-hoc wireless LAN is a group of computers, each with a WLAN adapter, connected as an independent wireless LAN. Ad-hoc wireless LAN is applicable at a departmental scale for a branch or SOHO operation.

Q: What is Infrastructure?

A: An integrated wireless and wired LAN is called an Infrastructure configuration. Infrastructure is applicable to enterprise scale for wireless access to central database, or wireless application for mobile workers.

Q: What is Roaming?

A: Roaming is the ability of a portable computer user to communicate continuously while moving freely throughout an area greater than that covered by a single Wireless Network Access Point. Before using the

roaming function, the workstation must make sure that it is the same SSID with the Wireless Access Point of dedicated coverage area.

Q: What is Spread Spectrum?

A: Spread Spectrum technology is a wideband radio frequency technique developed by the military for use in reliable, secure, mission-critical communications systems. It is designed to trade off bandwidth efficiency for reliability, integrity, and security. In the other words, more bandwidth is consumed than in the case of narrowband transmission, but the trade off produces a signal that is, in effect, louder and thus easier to detect, provided that the receiver knows the parameters of the spread-spectrum signal being broadcast. If a receiver is not turned to the right frequency, a spread-spectrum signal looks like background noise. There are two main alternatives, Direct Sequence Spread Spectrum (DSSS) and Frequency Hopping Spread Spectrum (FHSS).

Q: What is WEP?

A: WEP is Wired Equivalent Privacy, a data privacy mechanism based on a 64-bit or 128-bit as described in the IEEE 802.11 standard.

This section explains the glossary of terms used in this manual that are required to configure the network.

■ Wireless Channel

If there is more than one Wireless LAN network with different ESS-ID on the same floor, and they are communicating with each other, the baud rate may be slowed, due to the same radio frequency being used. If this happens, you can still communicate regardless of other LAN networks by using to use different frequencies (wireless channels).

Note:

If they are communications using the wireless LAN, be sure to set all the Units the same wireless channel.

■ DHCP Server

When configuring the network TCP/IP, be sure to set the IP address in each personal computer and other devices. When there is a DHCP server on the network, you can assign IP addresses automatically to the personal computers and the Access Point on the network. For the Windows NT server and dial-up router, or other DHCP server function, refer to the Windows 2000, Windows NT, or dial-up router manual, or consult the manufacturer.

■ ESS-ID

This ID is used to prevent cross-communication during communication between the Access Point and personal computers within the wireless LAN. The Wireless LAN personal computers that have the same ESS-ID as the Access Point can communicate with the Access Point. The ESS-ID is case sensitive. You can enter a maximum of 32 alphanumeric characters, and the underline "_".

■ LAN (Local Area Network)

Read as one word. A LAN is a network in a comparatively small area, such as campus or within a single building. The LAN baud rate varies from 10 Mbps to 100 Mbps.

■ MAC Address (Media Access Control Address)

The MAC address is a physical address specific to each network card. The MAC address is configured from a total of six bytes as follows: A vendor code comprising the lead three bytes and a 3-byte user code. The vendor code is managed and assigned by IEEE. The user code is managed using a unique (unduplicated) number from the network card manufacturer. That is, the MAC address is assigned as a physical address unique throughout the world. In an Ethernet LAN, the MAC address is used as a base to create a frame for sending and receiving.

■ TCP/IP (Transmission Control Protocol/Internet Protocol)

TCP/IP is a protocol equivalent to the network and transport levels of the OSI reference model, and it is defined using RFC. Consequently, different terminals can communicate with each other using TCP/IP.

- Normally, TCP/IP includes the application protocols TELNET and FTP.
- TCP/IP is the standard Internet protocol.

■ WEP (Encryption)

By setting an encryption key in the Access Point, you can prevent wireless packets from being decrypted externally.

■ Firmware

Firmware is the name given to the software (programs) built into hardware such as the router, modem, and terminal adapter. This software is built into the hardware, so it can be said to be in-between hardware and software.

■ Protocol

Protocols are the procedures and regulations for sending and receiving data between the network terminals. For example, if two computers are communicating, you can send the correct information according to the regulations by formatting all required information. The protocol such as which terminal sends first, what type of message, what type of message the receiving terminal should send in reply, the data format, and responses to communications errors are same of examples.

■ Roaming Function

Using the roaming function and moving from one room to another room, you can switch the Access Point automatically. With the roaming function, you can easily move from the office to the conference room while maintaining access to the network.



Appendix C

Specifications

This chapter describes the specifications of the product and the LAN port connector.

Wireless LAN Interface Standards

IEEE 802.11/11b Compliant

Antenna

Single Dipole Antenna (with reversed SMA connector)

Frequency Range

2.4~2.4835GHz (Industrial Scientific Medical Band)

DSSS - Direct Sequence Spread Spectrum

Data Transmission Rate

11Mbps / 5.5Mbps / 2Mbps / 1Mbps Auto Fall-Back

Access Mode

Infrastructure mode

Data Security

Provides both 64-bit & 128-bit WEP Encryption

Output Power

15 ~16.5 dBm

Receiving Sensitivity

-82dBm Min.

Roaming

IEEE 802.11 Compliant

Channels

11 Channels (US, Canada)

13 Channels (Europe)

Coverage Area

Indoors: up to 50M (165 ft.) @11Mbps
up to 80M (265 ft.) @5.5 Mbps or lower

Outdoors: up to 150M (500 ft.) @11 Mbps
up to 300M (1000 ft.) @5.5 Mbps or lower

(Depending on environment)

Operating Environment

Operating Temperature: 0oC to 50oC degree

Storage Temperature: -25oC to 70oC degree

Humidity 10% to 90% non-condensing

Customer Satisfaction(顧客服務)

If you have any question,welcome to contact us.(如有疑問歡迎多加指教)

Overseas Central Operation Office

7F, NO.108, Min-Chyuan Rd., Hsin-Tien, Taipei Hsien..

Tel:+(886)2-2219-1816 Fax:+(886)2-2219-0655

URL:<http://www.planex.net> E-mail: inquiry@planex.co.jp

Head Office : Japan

PCI Bldg. 12-7 Nihonbashi-Ohdenmacho Chuo-ku, Tokyo103-0011

Tel : +(81)3-5614-1011 Fax : +(81)3-5614-1016

URL:<http://www.planex.co.jp> E-mail: inquiry@planex.co.jp

Taiwan

地址:231台北縣新店市民權路108號7樓

電話:02-2219-1816 傳真:02-2219-0655

<http://www.planex.com.tw> E-mail:service@planex.com.tw

Singapore

175 Bencoolen Street, #01-43 Burlington Square,

Singapore 189649.

Tel :+65-6333-4055 Fax :+65-6336-8158

URL:<http://www.planex.net> E-mail :info-sales@planex.com.sg

PLANEX COMMUNICATIONS INC.

日商久森資訊股份有限公司